

FITTING INSTRUCTIONS



MODEL :

TRIUMPH BONNEVILLE

PRODUCT :

CAFÉ RACER SEAT

CODE :

SCR-TBON




CONTENTS

- 1 x Seat cowl base
- 1 x Seat
- 1 x Plastic frame cover
- 1 x Metal support
- 2 x Bolts M6x15
- 2 x Bolts M8x20
- 1 x Key Bolt M6x10
- 1 x Clip M6
- 1 x Key
- 1 x Front Foam Tape
- 6 x Foam Tape
- 2 x TY-rap
- Fitting instructions

MATERIAL SPECIFICATIONS

- Plastic parts are made of ABS material. For painting instructions consult specialized shops. Every color company has instructions for ABS material painting.
- Metal parts are made of stainless steel and bolts are galvanized.
- Seat foam material is multiple layer 20-30mm thickness depending from position.
- Specialized membrane beneath leather is reassuring the foam is "sealed" from water.
- Synthetic Leather is textured with high strength thread.
- Seat cowl can be used as a storing box.
- **Caution:** the seat can't be considered as anatomic and it's not made for racing use!

PLACEMENT

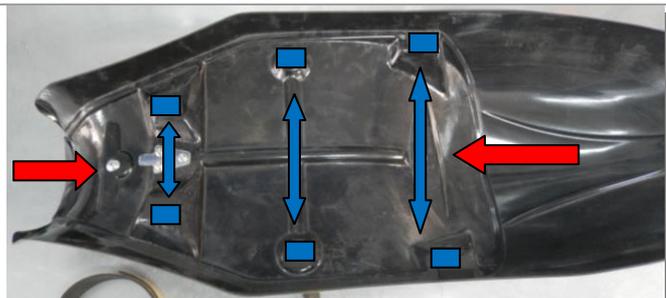


1. Place the seat cowl base upside down and screw the seat base with the cowl using the M6x15 bolts (**red arrows**).

Place the 6 x Foam Tapes on the spots that the seat base attach the frame (**blue arrows**).




2. Remove the old seat and keep the 2 bolts. You will use them afterwards. Tool needed No 6 T shape allen-wrenche like the picture.

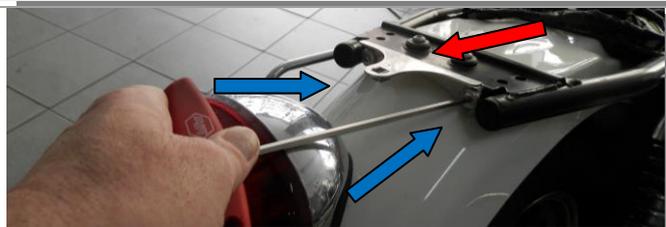

3. Fit the clip on metal support included in the package. The clip must be, as shown in the picture, with the square side downwards (**red arrow**). Screw metal support at the same position your old seat was fitted (using the original 2 x bolts from stage 2). Before tighten the bolts make sure it is parallel with the frame and on the higher spot (**blue arrows**).



4. Place the Front Foam Tape included in the package as shown in the picture.

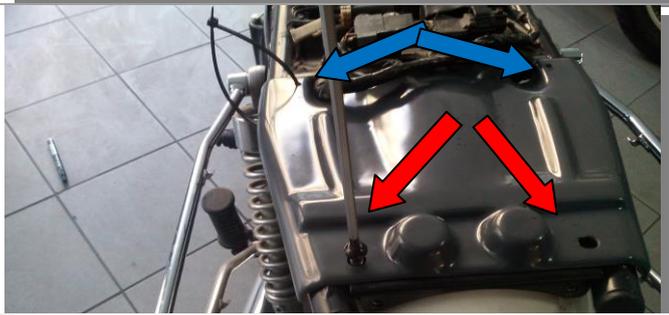

5. Place the inner frame plastic part.

Use the M8x20 bolts (red arrows).

Also get the TY-raps through the holes as shown in the picture (blue arrows).



6. In order to fit the seat, front metal support must be placed in the same position as your old seat was fitted (pictures).



7. Place the seat as shown in the picture, putting pressure in the front part downwards in order to get in position and with your other hand move the seat forward. Make sure the seat is "locked" before moving to next stage. In the beginning fit is tight in order to avoid future gaps.



8. Finally screw the key bolt M6x10 with the specialized key included in instructions.



Your seat is ready for use. Don't forget to have the key so you can use the cowl as a storing box.
HAVE A NICE RIDE!

For any farther information please do not hesitate to contact us:
Tel.: +30 210 8075387
Email: tech@hld.gr